



# Instructions for Connecting Collectors

EN

## Connection from the left-hand side

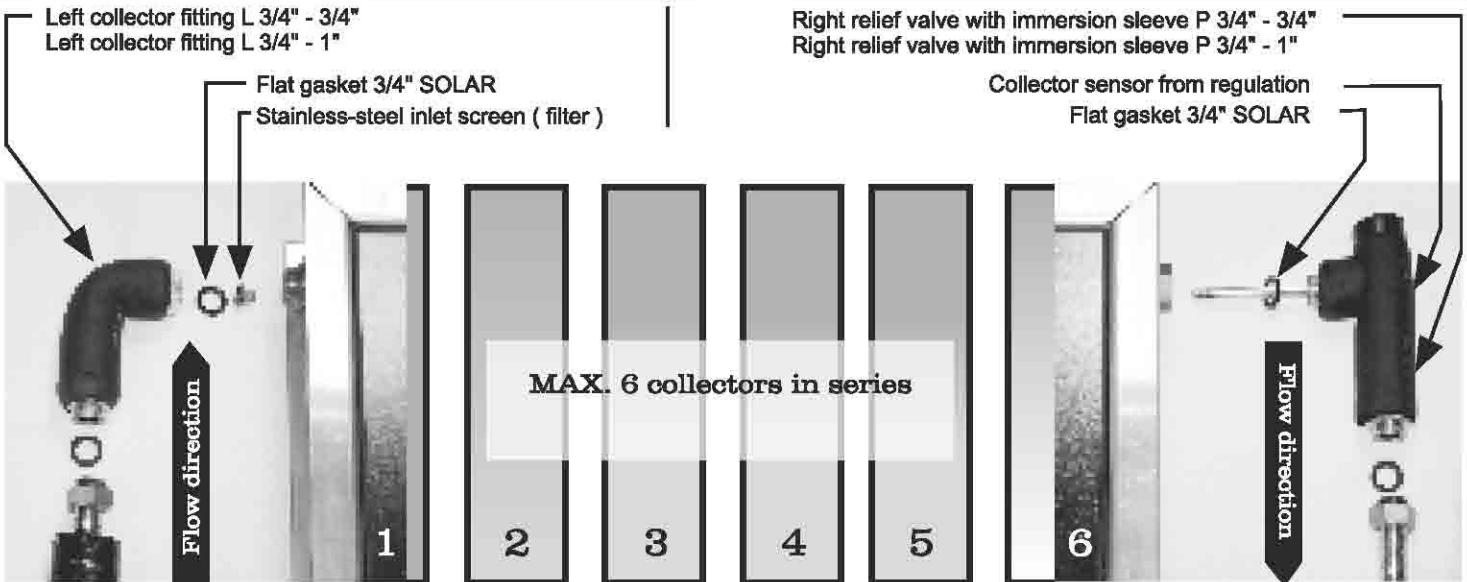

## Connection from the right-hand side

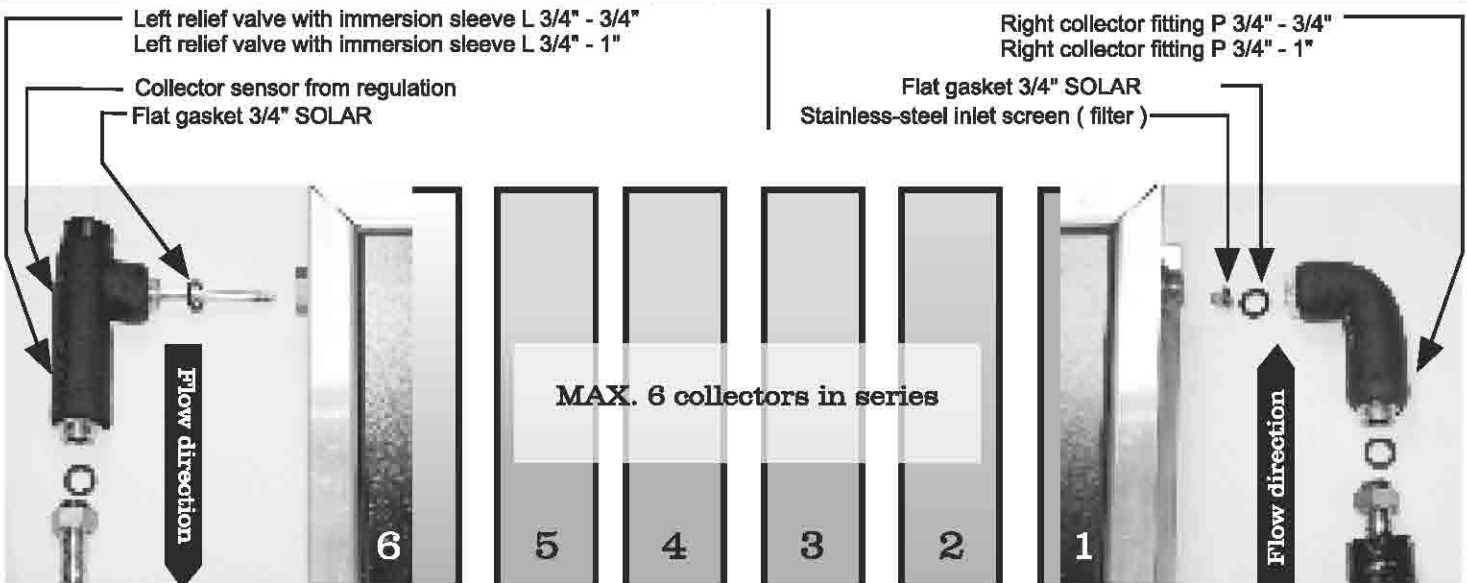

## Other connection parameters

Do not use galvanised screw unions and pipes.

Heat transfer fluid in accordance with assembly instructions

The connection of service room is in accordance with usual standards for solar systems.

